

Условное обозначение:

A1	Instrument cluster	
F1	Fuse and relay box	
F1	Fuse and relay box	
F1	Fuse and relay box	
F1	Fuse and relay box	
F1f13	Fuse 13	
F1f28	Fuse 28	
F1f33	Fuse 33	
F1f33	Fuse 33	
F1f42	Fuse 42	
F1f42	Fuse 42	
N2/2	ETR [GUS], airbag and side airbag control module	
N2/7	Restraint systems control module	
N69/1	Driver front door control module	
N69/1m1	Front power window motor (driver-side)	
N69/2	Front passenger front door control module	
N69/2m1	Front power window motor (passenger-side)	
N69/3	Rear driver-side door control module	
N69/3m1	Rear driver-side power window motor	
N69/4	Rear passenger-side door control module	
N69/4m1	Rear passenger-side power window motor	
N72	Lower control field control module	
N72	Lower control field control module	
N72e1	Automatic child seat recognition airbag OFF indicator lamp	
N72e2	Shift lever illumination	
N72s1	Left front power window switch	
N72s2	Right front power window switch	
N72s3	Left rear power window switch	
N72s4	Right rear power window switch	
N72s5	Rear power windows safety switch	
S21/3	Left rear power window switch	
S21/4	Right rear power window switch	
U592	Valid for restraint systems with window airbag	
U65	Valid for restraint systems without window airbag	
W1	Main ground (under control module)	
W1	Main ground (under control module)	
W1	Main ground (under control module)	
W6	Ground (left wheelhousing in trunk)	
W7	Ground (right wheelhousing in trunk)	

Позиция:

4 L
2 L
16 L
27 L
30 A
2 K
1 K
15 K
16 K
27 K
30 B
7 L
10 L
13 L
12 L
18 L
17 L
22 L
21 L
30 L
28 L
4 A
12 A
8 A
12 A
2 A
3 A
5 A
6 A
7 A
25 L
33 L
9 H
6 H
1 H
14 E
18 E
23 E
31 E


Номер документа: 2000-99gc
Название: Дискунтентация power windows 4-fold


Условное обозначение:

X11/4	Data link connector
X35/1	Left front door separation point
X35/1	Left front door separation point
X35/2	Right front door separation point
X35/2	Right front door separation point
X35/3	Left rear door separation point
X35/3	Left rear door separation point
X35/4	Right rear door separation point
X35/4	Right rear door separation point
Z37	CAN interior bus (low) connector sleeve
Z37/1	CAN interior bus (high) connector sleeve
Z51/18	Airbag OFF indicator lamp connector sleeve
Z70	Diagnostic socket pin 1 connector sleeve
Z81	Circuit 58d connector sleeve

Позиция:

6 L
12 H
13 H
17 H
19 H
21 H
22 H
28 H
29 H
19 C
21 D
9 F
5 H
4 H

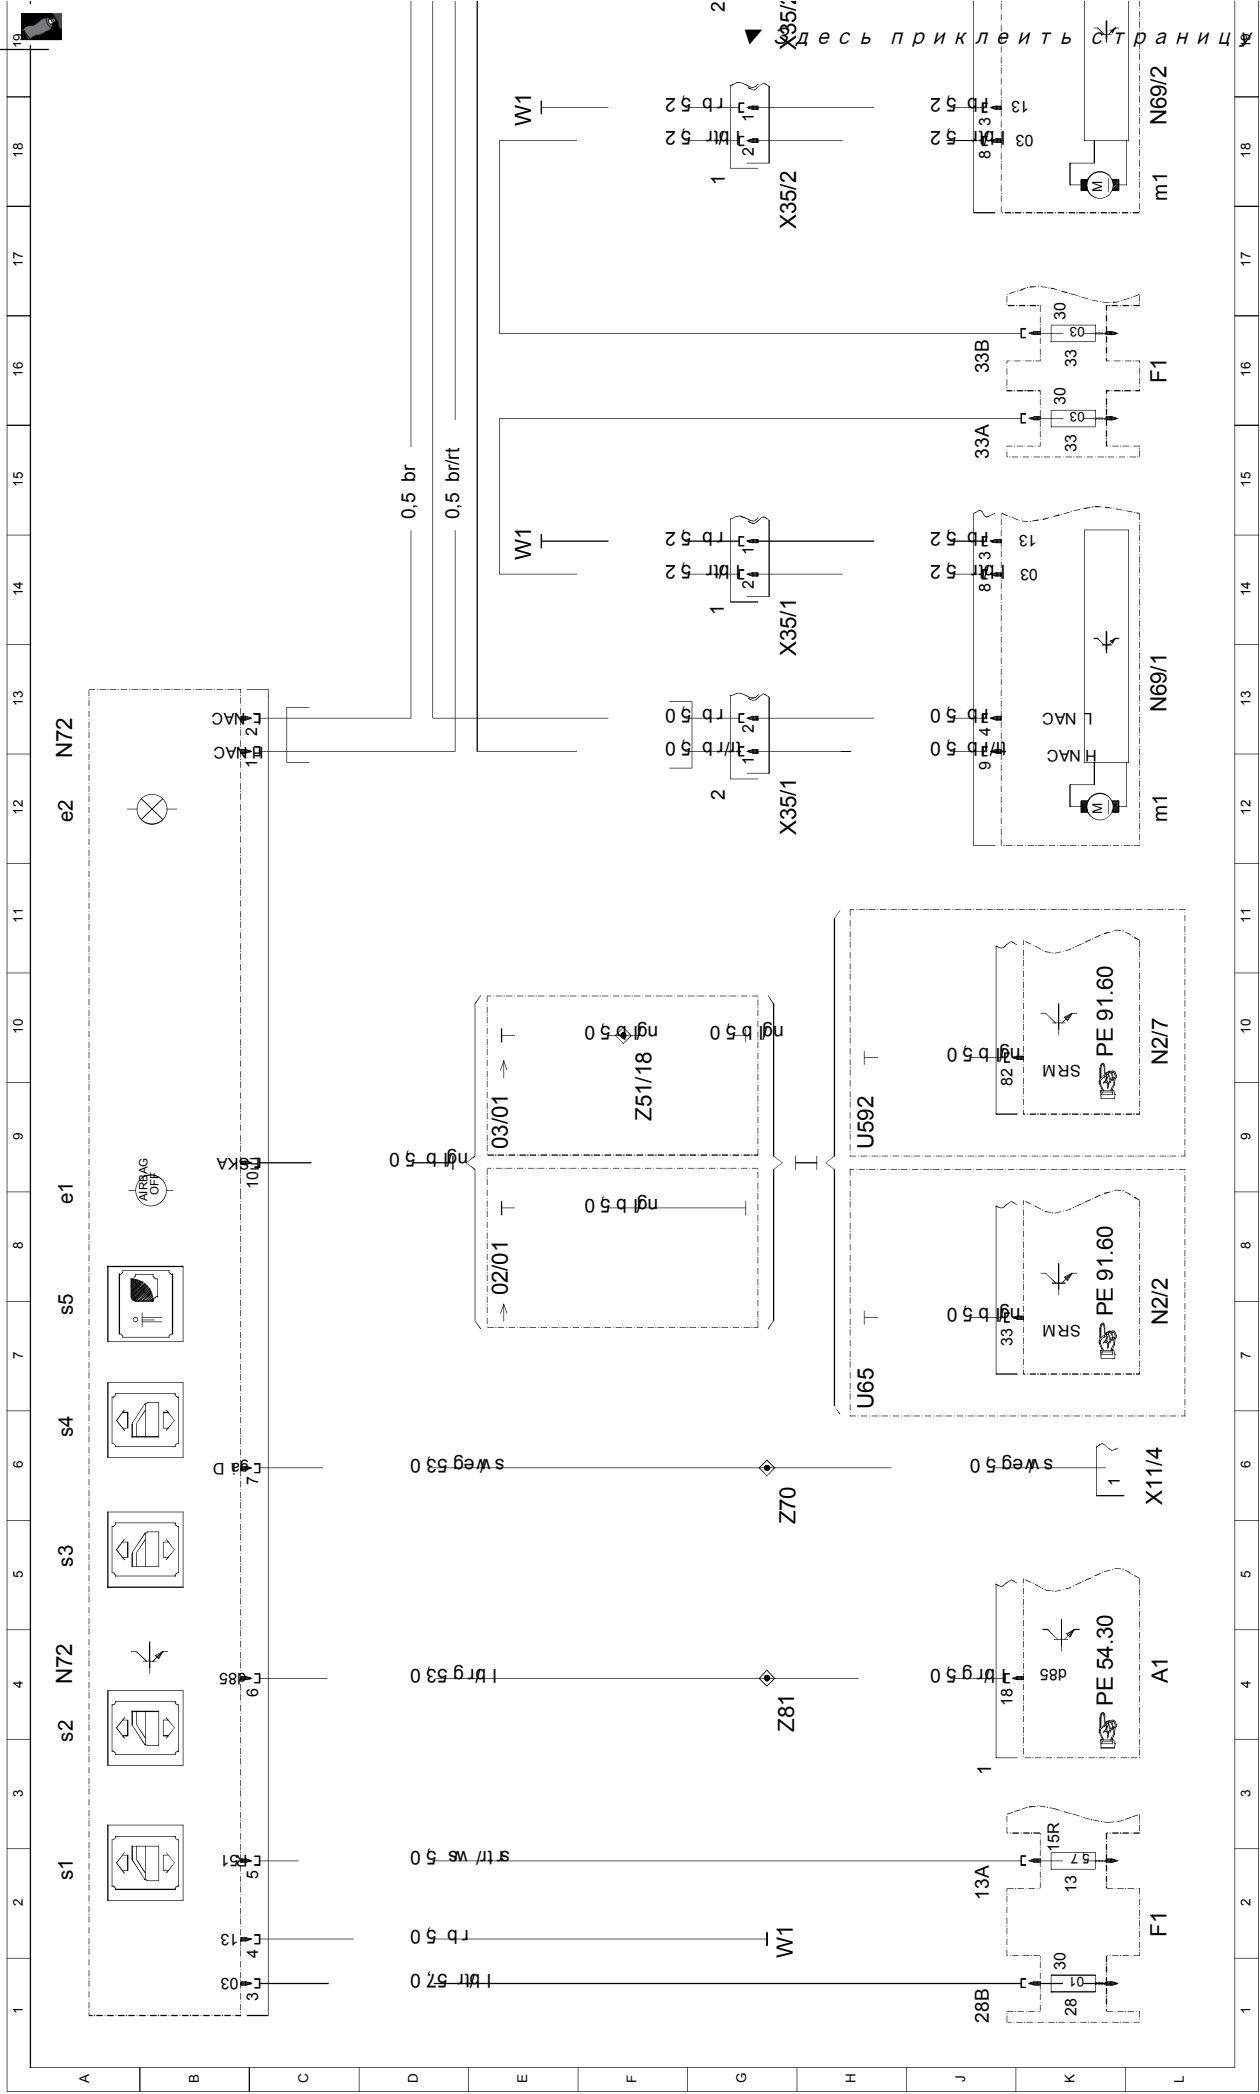

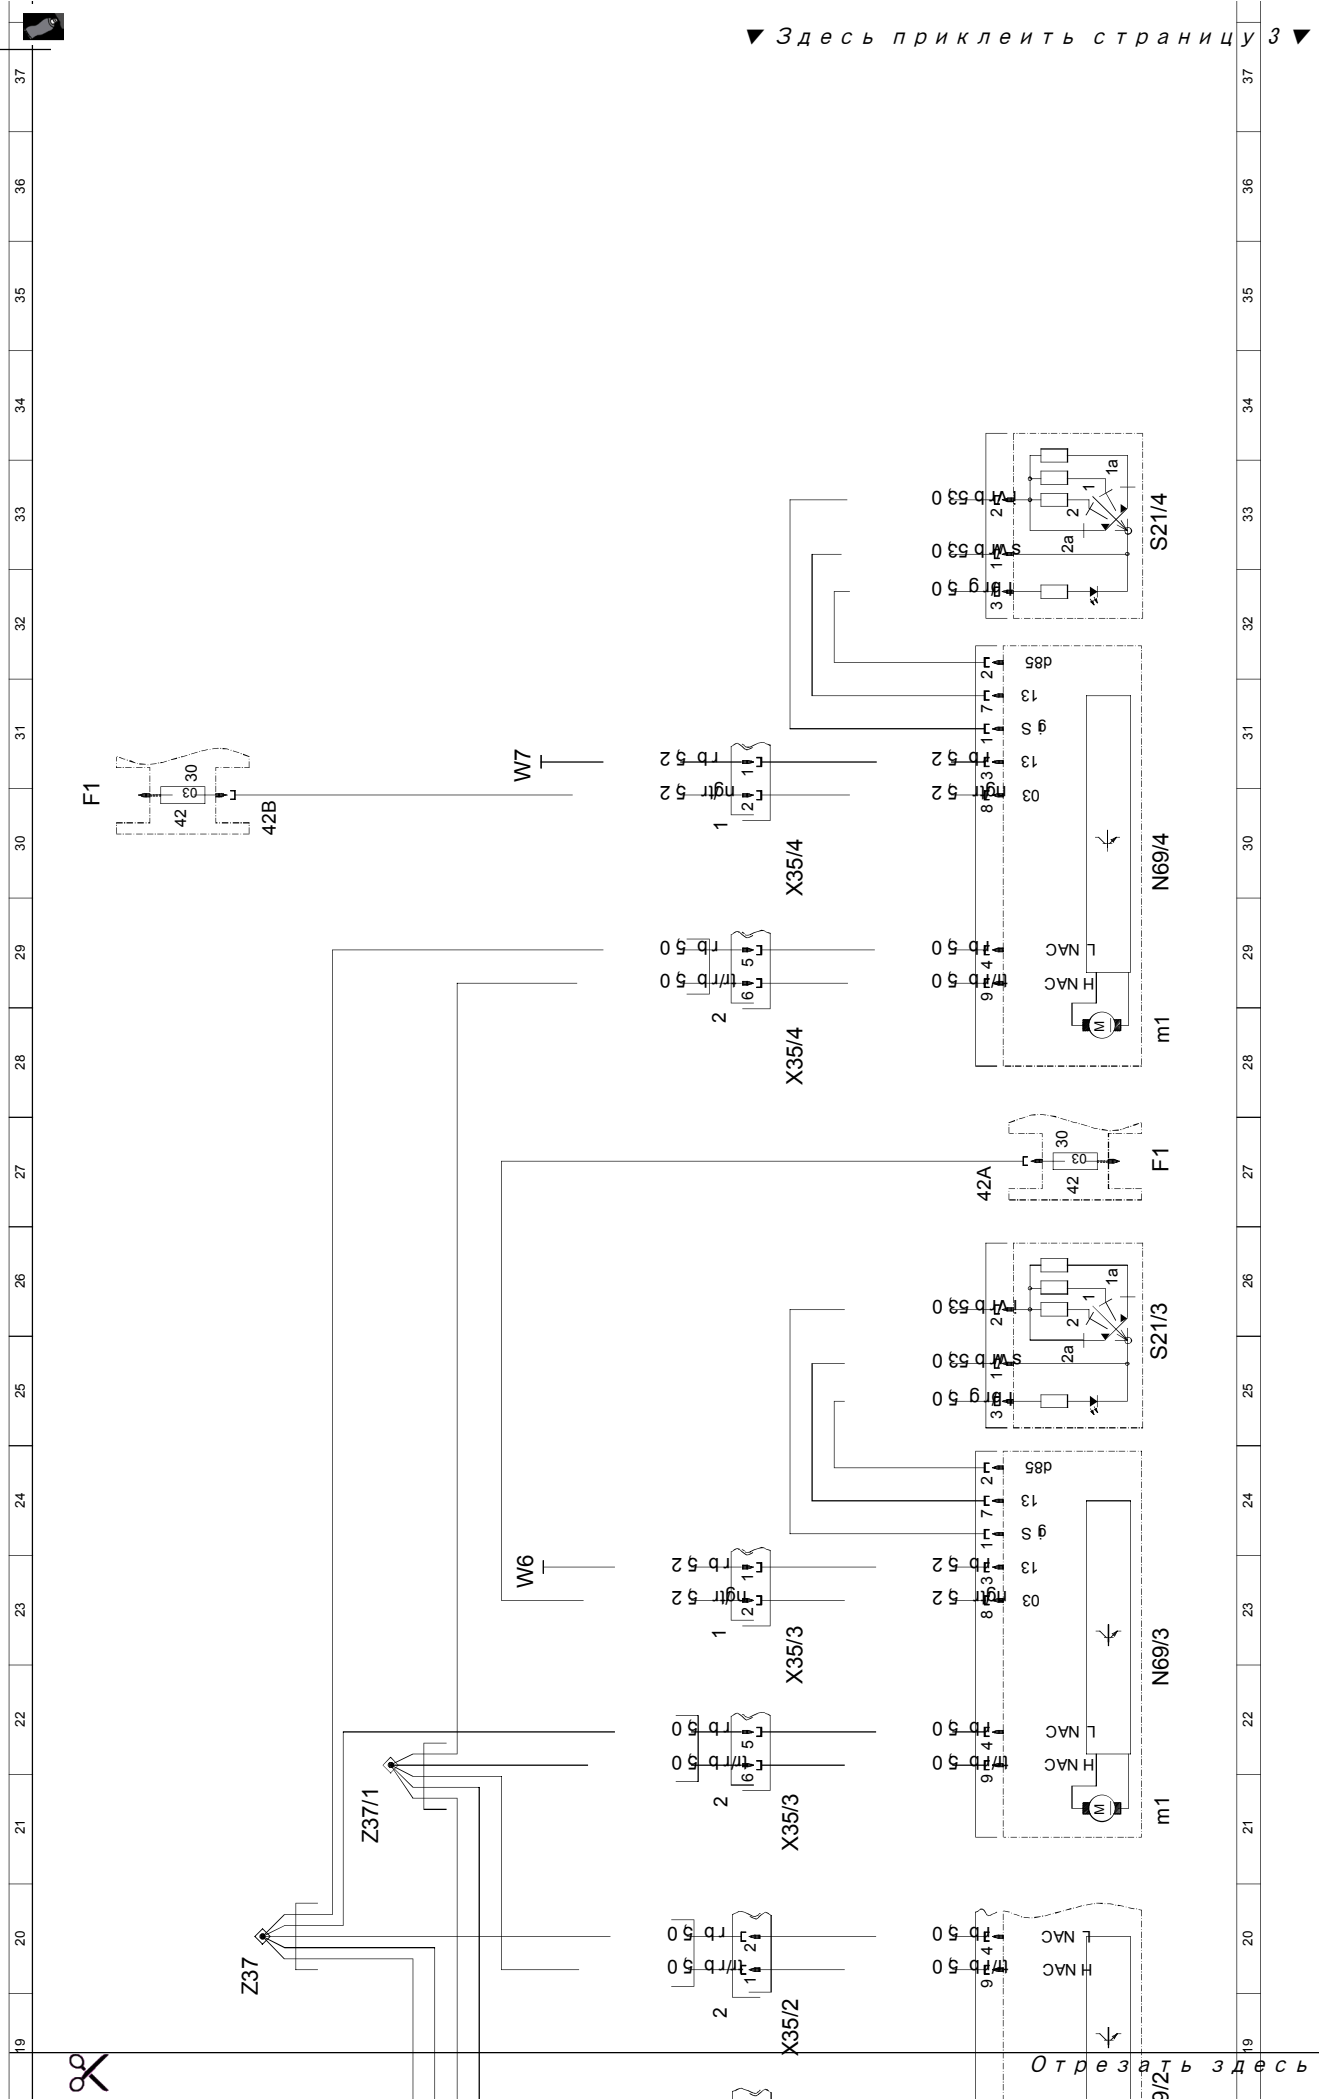

▼ Здесь приклеить страницу 3 ▼

37	38	39	40	A	B	C	D	E	F	G	H	J	K	L	37	38	39	40	